



 
Quick Start Guide

Before You Start...


Please make sure your PC is equipped with the following.

- ✓ OS Platform with TCP/IP support
- ✓ 10 or 100 BT Ethernet port
- ✓ 32 Mb RAM or more


Verify that the following items came with your DSL Kit:

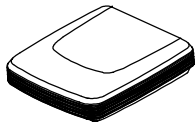


VisionNet 200ES

 


Power Adapter

 

RJ-11 Phone Cable

 


RJ-45 Ethernet cable

 


Quick Start Guide

 
External in-line and wall mount filters and two-way adapter are sold separately. If you did not order a kit, your package will not contain filters. Follow the instructions provided in this guide for basic installation. If you need further assistance installing them, please contact your service provider.

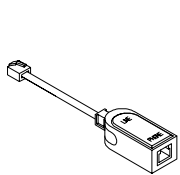

External In-line Filter

 

Wall-mount Filter

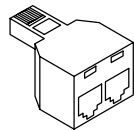 


Two-way Adapter

You will need the following values from your ISP to configure your PC and DSL Router.

- ✓ Your ISP's service model (i.e. 1483 Bridged IP LLC)
- ✓ Your VPI and VCI
- ✓ Your IP Address and Subnet Mask

Step 1 Connecting the Hardware

 - A.** Connect one end of the RJ-11 telephone cable to the Visionnet 200ES's **LINE** port and the other end to the ADSL service port (Wall Jack).
- B.** Connect the RJ-45 Ethernet cable to the **LAN** port of the VisionNet 200ES and the other end to the PC's Ethernet port.
- C.** Plug the coaxial jack from the electric power supply adapter into the VisionNet 200ES's **DC IN** port and the other end to the main outlet. Turn on the power switch.

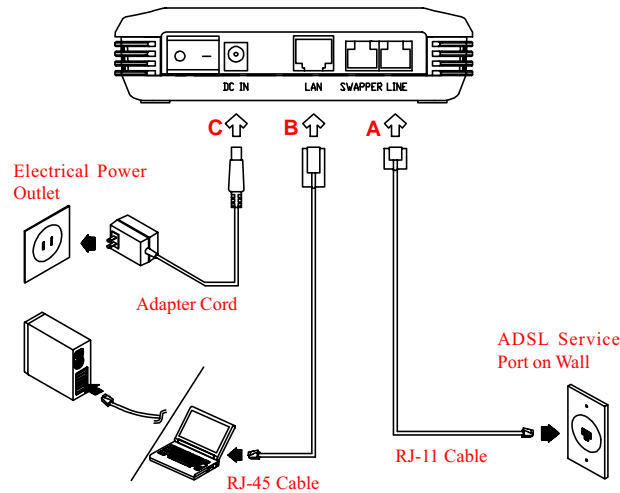

Note: The **LINE** port and **SWAPPER** port cannot be used at the same time. If the **ADSL** LED doesn't become solid in 2 minutes and you have verified a secure RJ-11 connection on the **LINE** port and wall jack, unplug the RJ-11 from the **LINE** port and reconnect it to the **SWAPPER** port. In most cases, the **LINE** jack is utilized in typical ADSL connections. In some areas, this may not be the case, so DQ Technology provides an alternative pin configuration (the **SWAPPER** port) in case the standard was changed at some point in your wall jack.

Step 2 Installing External Filter


Non-ADSL devices such as fax machines, answering machines or phones that share the same phone number as your DSL account require a filter. The filter prevents modem noise from disrupting regular telephone service. Filters can be in the form of a stand-alone filter or a wall-mount filter.

A filter can also be plugged into a two-way adapter if your DSL modem will share the same phone jack with another device.

External In-line Filter

For each non-ADSL device that shares a DSL phone number:

 
- a.** Unplug the non-ADSL device's cord (such as phone) from the phone jack.
- b.** Plug the filter into the phone jack.
- c.** Plug the non-ADSL device's cord into the filter.

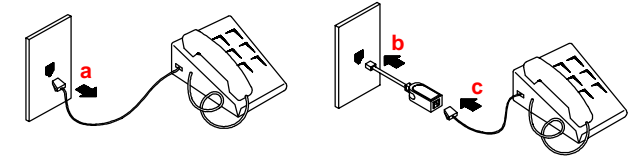

Wall-mount Filter

If you use a wall mount phone:

 
- a.** Remove the phone.
- b.** Connect the wall-mount filter to the wall plate.
- c.** Reconnect the phone.



Two-way Adapter

If your DSL modem and another non-ADSL device will share the same phone jack, install a two-way adapter:

 - a.** Plug adapter into the phone jack.
- b.** Plug a filter into one of the sockets of the two-way adapter. The other socket will be used to connect the DSL cable.
- c.** Plug the telephone (or other non-ADSL device) cord into the filter.
- d.** The other socket on the two-way adapter should be used to connect directly into your DSL modem.

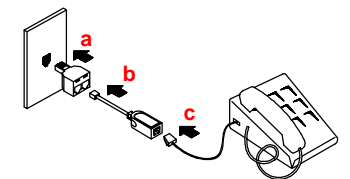


Continued on back...


Step 3 Configuring Your PC to Access the 200ES

To access the configuration pages, you must set your PC's IP address to **10.0.0.1** and Subnet mask to **255.0.0.0**.

 - Right-click the **Network Neighborhood** icon and select **Properties**.
- The **Network** window appears, select the **Configuration** tab, then select TCP/IP-->Network Interface Card. Click the **Properties** button.

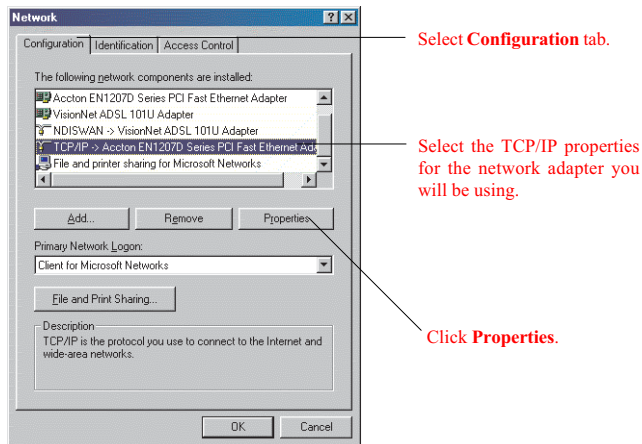

 - The **TCP/IP Properties** window will appear. Select the **IP Address** tab, then select the **Specify an IP address**. Enter the **IP Address** as **10.0.0.1** and **Subnet Mask** as **255.0.0.0**, click **OK**.

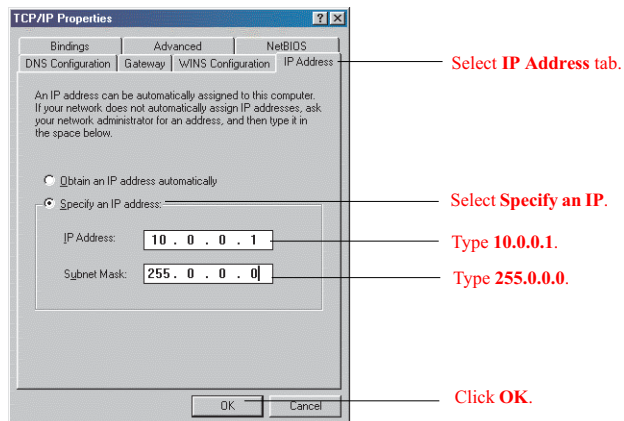

- You will be asked to restart your computer to complete the settings. Click **Yes** to restart your computer.

 
Note: These procedures will only work in Windows 95, 98, 98SE, or Me. If you are using Win 2000, Win XP, Win NT or a MAC, please refer to the user manual or check your network adapters documentation.

Step 4 Configuring the 200ES Modem


You can use your PC's web browser software to access the 200ES's configuration pages. The default address of the modem is **10.0.0.2**.

Accessing the 200ES

- Start your web browser and then type **10.0.0.2** at web address.

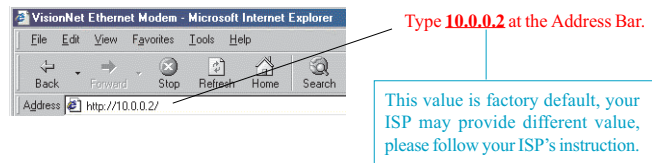

 
- The **Enter Network Password** window appears, type "admin" in **User Name** and "visionnet" in **Password**.

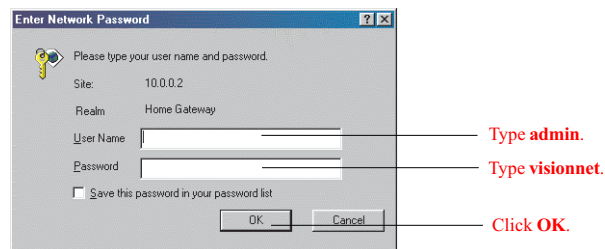


Quick setup the Configuration page

The 200ES supports 1483 Bridged IP LLC and 1483 Bridged IP VC-MUX two Link Protocols to make the Internet connection, please configure your 200ES and PC according to the Link Protocol provided by your ISP.

 - Click the **WAN** option in the **Configuration** menu.

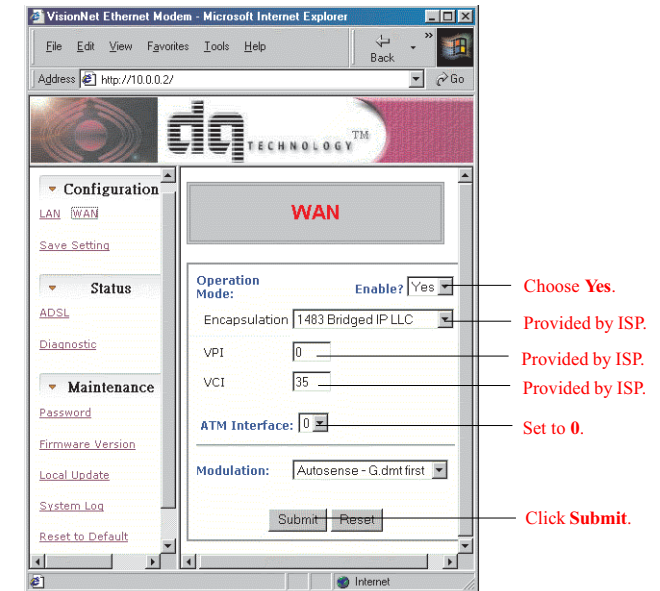

 - Click **Save Setting** option in the **Configuration** menu.

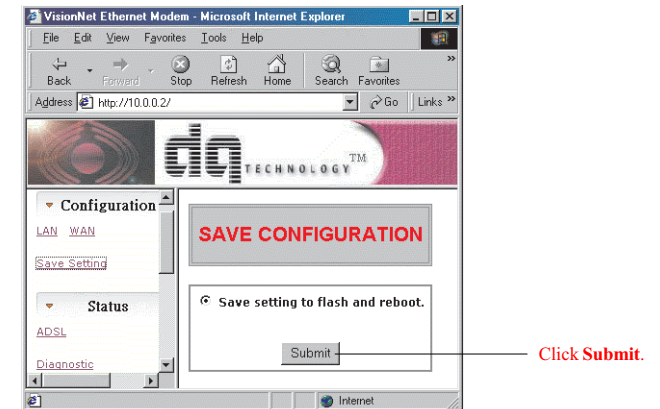

- You will need to change the IP configuration of your PC. Please refer to the user manual or contact your ISP for details on how to setup your PC.